SERIES LTD

3 POINT TAN

DISC

TANDEM

HARROW

PARTS AND OPERATER MANUAL

Domries Enterprises, Inc 12281 Rd 29 Madera, California 93638 Phone (559) 673-9143 Fax (559) 673-4110 Visit our Web-Site at www.domriesentinc.com

asthere's

IMPORTANT! PLEASE READ!

TO OUR CUSTOMER - USER'S RESPONSIBILITY - WARRANTY

TO OUR CUSTOMER

The following pages and illustrations are printed to help supply you with the knowledge to better operate and service your new **DOMRIES** equipment.

We are proud to have you as a customer and feel you will be proud to be a DOMRIES owner.

Any piece of equipment needs, and must have a certain amount of service and maintenance to keep it in top running condition. We have attempted to cover all the adjustments required to fit most conditions; however, there may be times special care must be taken to fit a condition.

Study this operator's manual carefully and become acquainted with all the adjustments and operating procedures before attempting to operate your new equipment. Remember, it is a machine and has been designed and tested to do an efficient job in most operating conditions and will perform in relation to the service it receives.

If special attention is required for some conditions, ask your **DOMRIES** dealer; his Parts and Service Organization will be glad to help and answer any question on operation and service of your new machine.

ATTENTION! BECOME ALERT!

YOUR SAFETY IS INVOLVED

This symbol is used to call your attention to safety precautions that should be followed by the operator to avoid accidents. When you see this symbol – Heed Its Warning.

USER'S RESPONSIBILITY

It is the responsibility of the user to read the Operator's Manual and understand the safe and correct operating procedures as pertains to the operation of the product, and to lubricate and maintain the product according to the maintenance schedule in the Operator's Manual.

The user is responsible for inspecting his machine and for having parts repaired or replaced when continued use of the product would cause damage or excessive wear to other parts. It is the user's responsibility to deliver his machine to a DOMRIES dealer, for service or replacement of defective parts which are covered by the standard warranty. When requesting warranty service, you present your copy of delivery record.

MODEL#	 		

SERIAL#_____

Safety Precautions

ATTENTION! BECOME ALBERT! YOUR SAFETY IS INVOLVED!

 
This symbol is used to call your attention to safety precautions. That should be followed by the operator to avoid accidents. When you see this – Heed Its Warning.

Many hours of lost time and much suffering is caused by the failure to practice simple safety rules.

- READ this manual carefully to acquaint your self with the Disk Harrow. Opening unfamiliar equipment can cause accidents.
- LOWER IMPLEMENT if possible, when adjusting maintenance work; otherwise BLOCKS IT SECURELY at a workable height.
- When Implement and tractor are parked always lower disk to the ground and place a FLAG OR OTHER WAARMING DEVICE on each corner as someone could run or bump into the implement.
- 4. Implement should be DETACHED ONLY in an area where Children DO NOT PLAY.
- 5. DO NOT wear loose fitting clothing that could catch on various parts.
- 6. Machinery should be OPERATED ONLY by those who are RESPONSIBLE AND DEEGATED to do so.
- ONLY ONE PERSON the operator should be permitted on the tractor when implement is in operation, he should be thoroughly familiar with tractor and implement.
- 8. MAKE CERTAIN that everyone is in clear before starting tractor and implement combination.
- 9. BEFORE WORKING under the any hydraulically controlled unit IS SURE it is SECURELY BLOCKED.
- 10. The RATE OF SPEED on hillsides or curves should be regulated so there is no danger of tipping.
- 11. DO Not drive too close to the edge of a ditch or creek.
- 12. REDUCE SPEED when transporting unit to avoid bouncing and momentary loss of steer ability.
- **13. MAKE CERTAIN** tractor is equipped with sufficient front end weight to counter-balance the plow weight and maintain stability of front of tractor.
- 14. DO NOT attempt to operate tractor and implement unless you are in the diver seat.
- 15. ALWAYS place transmission in PARK or NEUTRAL, LOCK BRAKES, STOP ENGINE AND REMOVE START KEY before dismounting from the tractor.
- 16. NEVER stand between tractor and disc when hitching.
- 17. PROVIDE a first aid kit. Treat all scratches, cuts, etc. with proper antiseptic immediately.
- 18. If DECALS become damaged or come off, they should be replaced immediately.
- 19. REMEMBER that safe operation is no accident.

ON HIGHWAY OPERATION

- 1. Use the SLOW MOVING vehicle emblem in daytime and approved warning lights at night, or during other periods of poor visibility, to prevent highway accidents.
- 2. COMPLY with Local highway regulation concerning moving machinery on highways.
- 3. MAINTAIN complete Control of machines at all times when traveling on the highway.
- 4. Due to the width of the implement, US EXTRA CAUTION on highways, far lanes and when approaching gates.



Madera, CA 93637



Phone (559) 673-9143 Fax (559) 673-4110 www.domreisentinc.com

WARRANTY

Domries warrant's all products of it's manufacture to be free of defects in material and workmanship under normal usage and maintenance for the period of one year from the date of delivery to the original purchaser.

RETURN GOODS

Domries shall have the option of requiring the prepaid return of any parts claimed defective, however, No parts shall be returned without Domries warranty form with good authorized number. Goods shall be returned to such location as shall be designed by Domries.

Domries will at it's option, either repair or replace, F.O.B. Domries factory. Such parts as appear to to Domries upon inspection, to have been defective in materials and/or workmanship. Wearing parts that are determined to be defective are subject to an adjustment based upon useful life.

REPAIRS

Any field or repairs must have the authorized repair number from Domries before any work is done. Claim for warranty must be made with a Domries warranty form and repair number.

Domries will not accept any charged other than its direct Dealer shop labor costs and part required to remedy such parts and/or workmanship at its Dealer place of business. The WARRANTY specifically excludes any charges for delivery, transportation, and/or shipping cost.

If the dealer is requested by the customer to travel or haul the machine to his shop or repair shop for the purpose of preforming a warranty obligation or free inspection, it would be for the customers convenience, and the cost of such a trip is to be paid by the customer. Any arrangement whereby the Dealer agrees to absorb all or a part of the cost is to be made between the Dealer and the Customer. To be considered a courtesy to the Customer by their Dealer.

LIMITED WARRANTY

Outside purchase equipment and accessories (not of Domries manufacture) are warranted only to the extent of the original manufacture's warranty to Domries.

Item limited - Hydraulic cylinders and hose - Bearings - Disc Blades - Wheels - Tires - Tubes - Seals.

No Warranty shall be paid by Domries before the part or parts and labor have been paid to Domries by the manufacturer. Domries shall then compensate the dealer or customer.

NO WARRANTY

(1) New product that has been subjected to operation in excess in recommended capacities, misused, negligence, lack of maintenance or accident or have been altered or repaired in any manner not authorized by Domries.


(2) Sharp turns while machine is ground void warranty, with the exception of a drag disc.

Domries shall in no event be responsible for any delay or any other consequential or indirect damage in connection with fulfilling any obligation under this WARRANTY.

Domries reserves the right to make change at any time in designs, materials and/or specifications of it's product without becoming liable or obligated in any way to make similar changes in previously manufactured products.


This WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES COVERING DOMRIES PRODUCTS and no other Warranties expressed or implied are made or authorized by Domries Enterprises, Inc.

This WARRANTY BECAME EFFECTIVE with shipments made on or after August 1st 1998

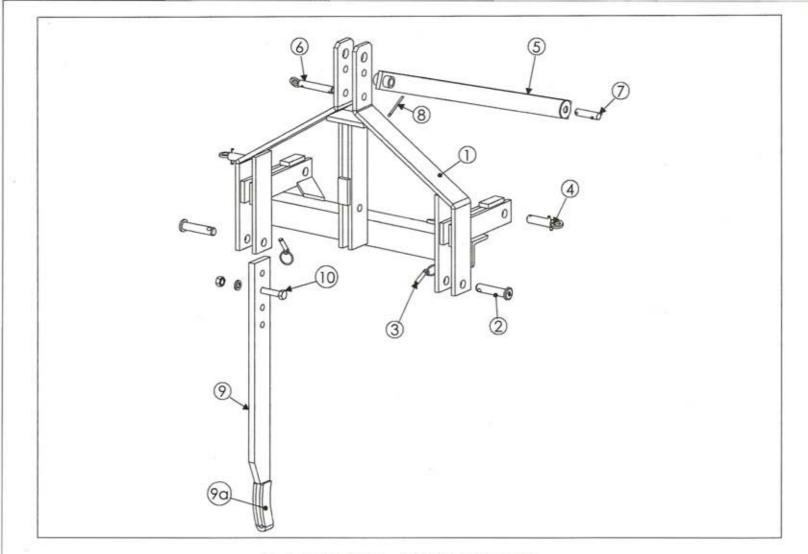


A FRAME ASSEMBLY

REF# PART #		# PART # DESCRIPTION	
1	LTD-18	A FRANE - CAT I & II	98.0 LBS
	LTD-19	A FRANE - CAT I	79.0 LBS
	LTD-20	A FRANE - CAT II	79.0 LBS.
2	BLD-27	LIFT PIN - CAT I	1.0 LBS.
	BLD-28	LIFT PIN - CAT II	1.5 LBS.
	BLD-29	LIFT PIN - CAT I & II	2.0 LBS.
3	BLD-33	KLICK PIN	0.5 LBS.
4	LTD-27	PIN - HOOK UP, W/ PULL RING	0.5 LBS.
5	LTD-21	BRACE - A FRAME	11.0 LBS.
6	BLD-30	PIN - BRACE, TOP	N/A
7	BLD-31	PIN - BRACE, BOTTOM	N/A
8	HP6	COTTER HAIR PIN	N/A
9	LTD-17	CENTER SHANK	N/A
	LTD-17a	WELD ON SHANK POINT - "U"	N/A
10	CS58234-5	BOLT - 5/8" NC. X2 3/4" LG. GR. 5	N/A
	LW58	LOCK WASHER - 5/8"	N/A
	N58	NUT - 5/8"	N/A
11	OH-112	8" SWEEP (INCLUDES HARDWARE) SWP-8	N/A

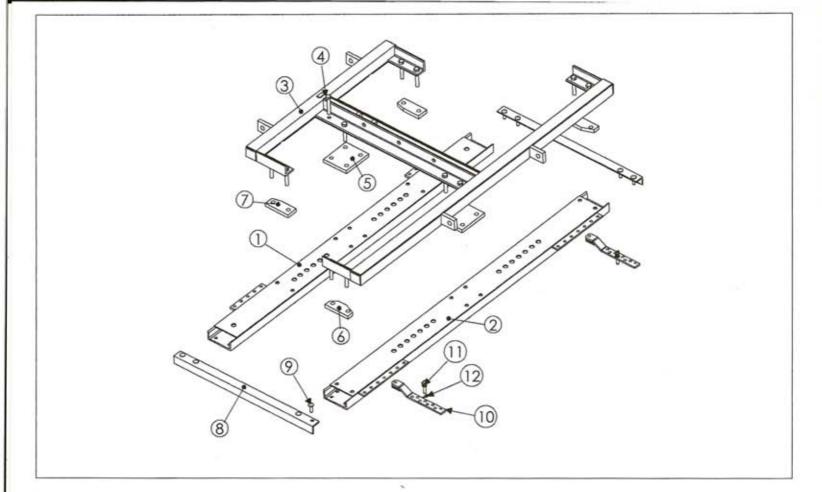


MAIN FRAME ASSEMBLY

REF#	PART #	DESCRIPTION	WT/LB.
1 LTD-10		FRONT CHANNEL	85.0 LBS.
2	LTD-11	REAR CHANNEL	87.0 LBS.
3	LTD-12	DRAW BAR - HITCH WELDMENT	156.0 LBS
4	CS584-5	BOLT - 5/8" NC. X4" LG. GR. 5	0.5 LBS.
	LW58	LOCK WASHER - 5/8"	0.1 LBS.
	N58	NUT - 5/8"	0.3 LBS.
5	LTD-13	SPACER SHIM (CENTER)	8.5 LBS.
6	LTD-14	SPACER SHIM- TRIMMED	3.0 LBS.
7	LTD-15	SPACER SHIN - PLAIN	3.0 LBS.
8	LTD-16	SIDE RAIL	9.0 LBS.
9	CB12112-5	BOLT - 1/2" NC. X 1 1/2" LG. GR . 5	N/A
	LW12	LOCK WASHER - 1/2"	N/A
	N12	NUT - 1/2"	N/A
10	BLD66L	SET BAR - LEFT HAND	1.5 LBS.
	BLD66R	SET BAR - RIGHT HAND	1.5 LBS.
11	BLD68 PIN - SET BAR W/ PULL RING		0.2 LBS.
12	HP3	COTTER - HAIR PIN TYPE # 3	0.1 LBS.

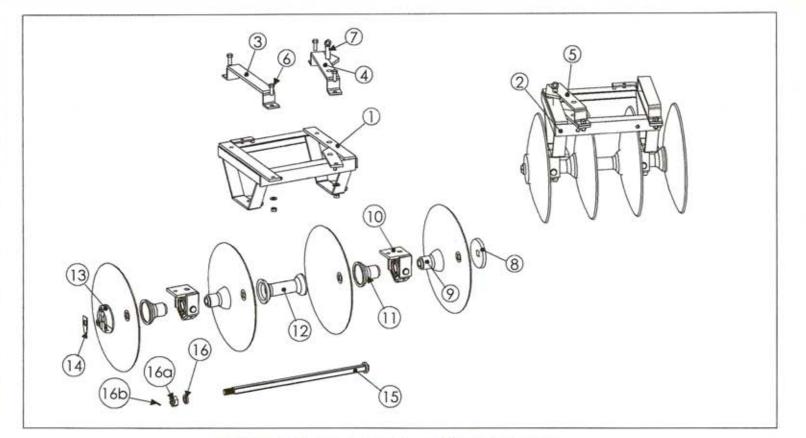


FRONT GANG ASSEMBLY

REF#	PART #	DESCRIPTION	WT/LB
1	LTD-40	LEFT FRONT GANG - 4 BLADE	55.0 LBS
	LTD-44	LEFT FRONT GANG - 5 BLADE	64.0 LBS
	LTD-48	LEFT FRONT GANG - 6 BLADE	70.0 LBS
2	LTD-41	RIGHT FRONT GANG - 4 BLADE	55.0 LBS
	LTD-45	RIGHT FRONT GANG - 5 BLADE	64.0 LBS
	LTD-59	RIGHT FRONT GANG - 6 BLADE	70.0 LBS
3	LTD-62	FRONT HOLD DOWN YOKE (LEFT & RIGHT)	8.5 LBS
4	LTD-60	LEFT FRONT PIVOT YOKE	9.0 LBS
5	LTD-61	RIGHT FRONT PIVOT YOKE	9.0 LBS
6	CS58134-5	BOLT - 5/8" NC. X 1 3/*4" LG.	0.5 LBS
	LW58	LOCK WASHER - 5/8"	0.2 LBS
	N58	NUT - 5/8" NC., HEX.	0.1 LBS
7	BLD65	PIVOT PIN W/ PULL RING	1.0 LBS
8	J57-S	END WASHER (STEEL) 1 1/8" SQ. UNIVERSAL	5.0 LBS
9	K84	HALF SPOOL - CVX, 1 1/8" SQ.	6.0 LBS
10	K-80-A-KIT	BEARING ASSY COMPLETE, 1 1/8" SQ.	13.5 LBS
11	K83	HALF SPOOL - CCV, 1 1/8" SQ.	5.0 LBS
12	JTL80	SPACER SPOOL - 1 1/8" SQ.	10.0 LBS
13	JDE-18	EXT. WASHER - CVX, 1 1/8" SQ.	7.0 LBS
14	J41	LOCK CLIP	0.3 LBS
15	GR-4	GANG ROD - 1 1/8" SQ 4 BLADE	12.5 LBS
	GR-5	GANG ROD - 1 1/8" SQ 5 BLADE	15.0 LBS
	GR-6	GANG ROD - 1 1/8" SQ 6 BLADE	17.5 LBS
16	LW118	LOCK WASHER - 1 1/8"	0.1 LBS
16a	6a SN118 SLOTTED NUT - 1 1/8"		0.3 LBS
16b	16b CP142 COTTER PIN 1/4" X 2" LG.		0.1 LBS

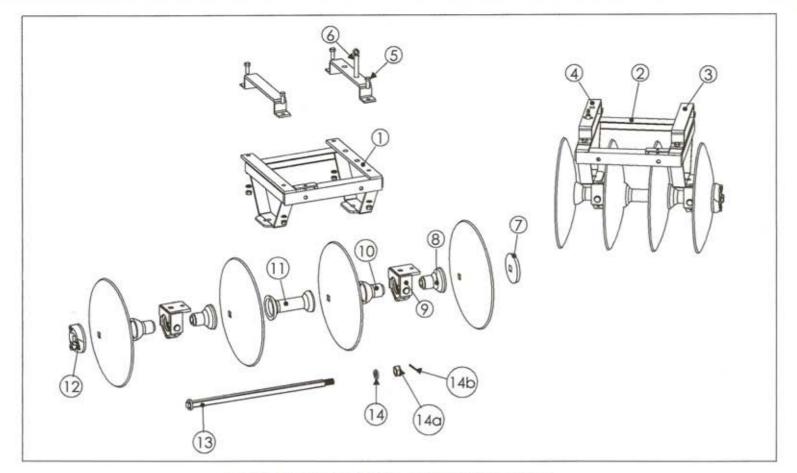


REAR GANG ASSEMBLY

REF#	PART #	DESCRIPTION	WT/LB
1	LTD-42	LEFT REAR GANG - 4 BLADE	52.0 LBS
	LTD-46	LEFT REAR GANG - 5 BLADE	61.0 LBS
	LTD-50	LEFT REAR GANG - 6 BLADE	67.0 LBS
2	LTD-43	RIGHT REAR GANG - 4 BLADE	52.0 LBS
	LTD-47	RIGHT REAR GANG - 5 BLADE	61.0 LBS
	LTD-51	RIGHT REAR GANG - 6 BLADE	67.0 LBS
3	LTD-64	REAR HOLD DOWN YOKE (LEFT & RIGHT)	9.0 LBS.
4	LTD-63	REAR PIVOT YOKE (LEFT & RIGHT)	9.0 LBS.
5	CS58134-5	BOLT - 5/8" NC. X 1 3/*4" LG.	0.5 LBS.
	LW58	LOCK WASHER - 5/8"	0.2 LBS.
	N58	NUT - 5/8" NC., HEX.	0.1 LBS.
6	BLD65	PIVOT PIN W/ PULL RING	1.0 LBS.
7	J57-S	END WASHER (STEEL) 1 1/8" SQ. UNIVERSAL	5.0 LBS.
8	K83	HALF SPOOL - CCV, 1 1/8" SQ.	6.0 LBS.
9	K-80-A-KIT	BEARING ASSY COMPLETE, 1 1/8" SQ.	13.5 LBS
10	K83	HALF SPOOL - CVX, 1 1/8" SQ.	5.0 LBS.
11	JTL80	SPACER SPOOL - 1 1/8" SQ.	10.0 LBS
12	JDE-18	EXT. WASHER - CVX, 1 1/8" SQ.	7.0 LBS.
13	GR-4	GANG ROD - 1 1/8" SQ 4 BLADE	12.5 LBS
	GR-5	GANG ROD - 1 1/8" SQ 5 BLADE	15.0 LBS
	GR-6	GANG ROD - 1 1/8" SQ 6 BLADE	17.5 LBS
14	LW118	LOCK WASHER - 1 1/8"	0.1 LBS.
14a	SN-118	V-118 SLOTTED NUT - 1 1/8"	
14b	CP142		

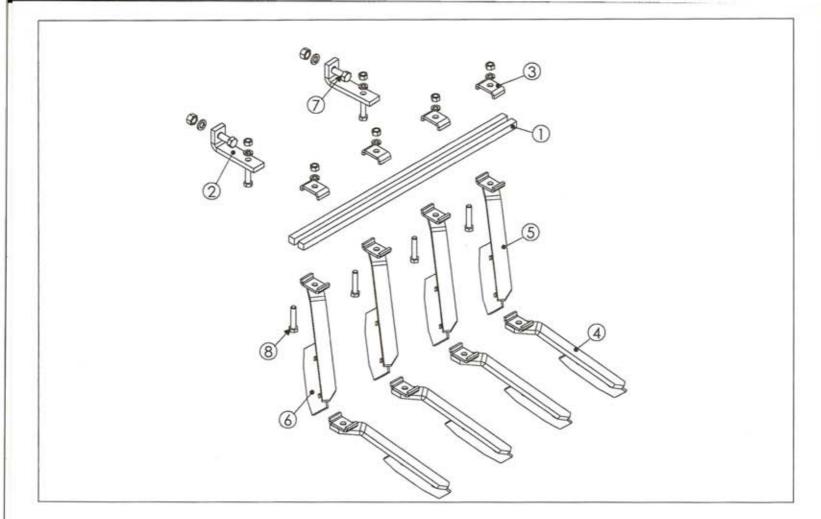

LTD - CLEANER SET


REF# PART #		F# PART # DESCRIPTION	
1	JCP24	CLEANER BAR (4 BLADE)	5.0 LBS.
	JCP25	CLEANER BAR (5 BLADE)	6.0 LBS.
	JCP26	CLEANER BAR (6 BLADE)	7.0 LBS.
2	JCP27	CLAENER BAR BRACKET	2.0 LBS.
3	JCP28	CLIP	0.3 LBS.
4	JCP29	CLEANER ARM - RIGHT FRONT, LEFT REAR	4.0 LBS.
	JCP30	CLEANER ARM - LEFT FRONT, RIGHT REAR	4.0 LBS.
5	JCP31	CLEANER BLADE (WELD ON OR BOLT ON)	1.0 LBS.
6	CS58112-5	BOLT - 5/8" NC. X 1 1/2" LG. GR.5	0.3 LBS.
	LW58	LOCK WASHER - 5/8"	0.1 LBS.
_	N58	NUT - 5/8"	0.1 LBS.
7	CS12212-5	BOLT - 1/2" NC. X 2 1/2" LG. GR. 5	0.2 LBS.
	LW12	LOCK WASHER - 1/2"	0.1 LBS.
	N12	NUT - 1/2"	0.1 LBS.

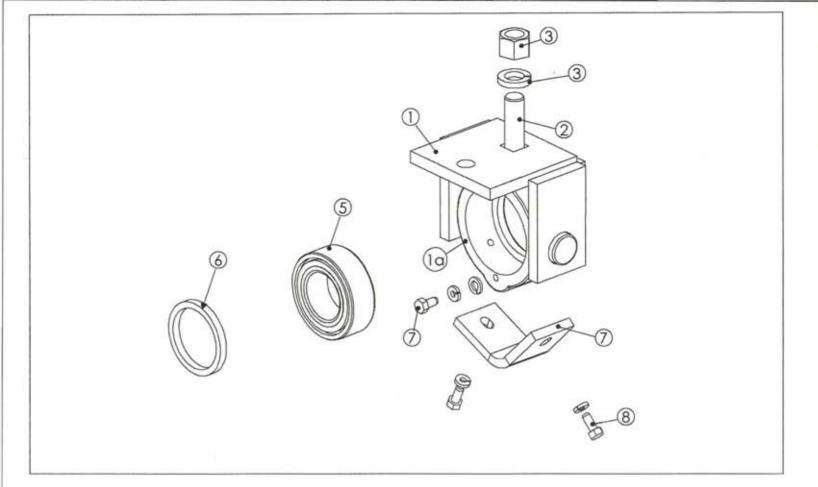

K-80-A-KIT


REF#	PART # DESCRIPTION		WT/LB.
1	K 81	BRG. HOUSING WELDMENT	10.0 LBS.
1a	K81C HOUSING - GNG. BRG.		4.4 LBS.
2	PB34214-8	PLOW BOLT - 3/4" NC. X 2 1/4" LG. GR. 8	0.1 LBS.
3	LW34	LOCK WASHER - 3/4"	0.1 LBS.
4	N34	NUT - 3/4"	0.2 LBS.
5	K85	BEARING - SEALED, 1 1/8" SQ.	1.8 LBS.
6	K86	RETAINING RING	0.2 LBS
7	CS51658-5	BOLT - 5/16" NC. X 5/8" LG. GR. 5	0.2 LBS.
	LW14	LOCK WASHER - 1/4"	0.1 LBS.
	LW38	LOCK WASHER - 3/8"	0.1 LBS.
8	K88	WEAR PLATE	1.5 LBS.
9	CS51634-5	BOLT - 5/16" NC. X 3/4" GR. 5	0.2 LBS.
	LW14	LOCK WASHER - 1/4"	0.1 LBS.

÷

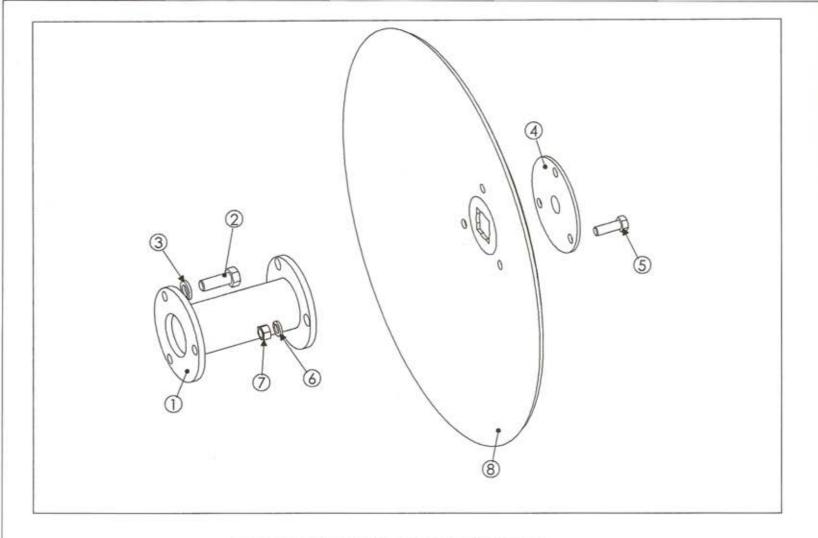

EXTENSION ASSEMBLY

REF#	PART #	DESCRIPTION	WT/LB.
1	JDE-16	EXT. SPOOL - FRONT, 1 1/8" SQ. 9" SPACING	9.0 LBS.
	JDE-17	EXT. SPOOL - REAR 1 1/8" SQ. 9" SPACING	9.0 LBS.
2	CS58134-5	134-5 BOLT - 5/8" NC. X 1 3/4" LG. GR. 5	
3	LW58	LOCK WASHER - 5/8"	0.2 LBS.
4	JDE - 20	STEEL CAP - UNIVERSAL	2.5 LBS
5	CS12112-5	BOLT - 1/2" NC. X 1 1/2" LG. GR. 5	N/A
6	LW12	LOCK WASHER - 1/2"	N/A
7	N12	NUT - 1/2"	N/A
8	EXT. BLADE	BLADES VARY AS PER MODELS	N/A

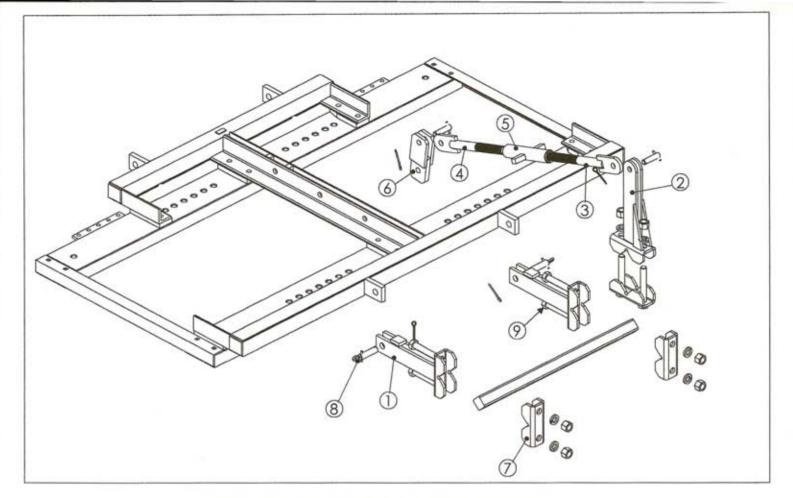

LTD-TOOLBAR ASSEMBLY

REF#	PART #	DESCRIPTION	WT/LB.
1	TBE-7	LIFTARM	12.2 LBS.
2	TBE-6	TOP LINK POST	12.0 LBS.
3	TBE-9	TURN BUCKLE - RIGHT HAND	4.8 LBS.
4	TBE-10	TURN BUCKLE - LEFT HAND	4.8 LBS.
5	TBE-8	TURN BUCKLE BODY	3.8 LBS.
6	TBE-5	CENTER POCKET ARM	6.5 LBS.
7	ACC-3	CLAMP	4.5 LBS.
8	LTD-27	HOOK UP PIN	0.5 LBS.
9	CS786-5	BOLT - 7/8" NC. X 6" LG. GR-5	1.2 LBS.
	LW78	LOCK WASHER - 7/8"	0.1 LBS.
	N78	NUT - 7/8"	0.2 LBS.