

CC SERIES

CLOD CRUSHER

PARTS AND OPERATOR MANUAL

Domries Enterprises, Inc

12281 Rd 29

Madera, California 93638

Phone (559) 673-9143 Fax (559) 673-4110

Visit our Web-Site at www.domriesentinc.com

IMPORTANT! PLEASE READ!

TO OUR CUSTOMER – USER'S RESPONSIBILITY – WARRANTY

TO OUR CUSTOMER

The following pages and illustrations are printed to help supply you with the knowledge to better operate and service your new **DOMRIES** equipment.

We are proud to have you as a customer and feel you will be proud to be a **DOMRIES** owner.

Any piece of equipment needs, and must have a certain amount of service and maintenance to keep it in top running condition. We have attempted to cover all the adjustments required to fit most conditions; however, there may be times special care must be taken to fit a condition.

Study this operator's manual carefully and become acquainted with all the adjustments and operating procedures before attempting to operate your new equipment. Remember, it is a machine and has been designed and tested to do an efficient job in most operating conditions and will perform in relation to the service it receives.

If special attention is required for some conditions, ask your **DOMRIES** dealer; his Parts and Service Organization will be glad to help and answer any question on operation and service of your new machine.

ATTENTION! BECOME ALERT!

YOUR SAFETY IS INVOLVED

This symbol is used to call your attention to safety precautions that should be followed by the operator to avoid accidents. When you see this symbol – Heed Its Warning.

USER'S RESPONSIBILITY

It is the responsibility of the user to read the Operator's Manual and understand the safe and correct operating procedures as pertains to the operation of the product, and to lubricate and maintain the product according to the maintenance schedule in the Operator's Manual.

The user is responsible for inspecting his machine and for having parts repaired or replaced when continued use of the product would cause damage or excessive wear to other parts. It is the user's responsibility to deliver his machine to a **DOMRIES** dealer, for service or replacement of defective parts which are covered by the standard warranty. When requesting warranty service, you present your copy of delivery record.

MODEL# _____

SERIAL# _____



Safety Precautions

**ATTENTION! BECOME ALBERT!
YOUR SAFETY IS INVOLVED!**

This symbol is used to call your attention to safety precautions. That should be followed by the operator to avoid accidents. When you see this – Heed Its Warning.

Many hours of lost time and much suffering is caused by the failure to practice simple safety rules.

1. **READ** this manual carefully to acquaint your - self with the Disk Harrow. Opening unfamiliar equipment can cause accidents.
2. **LOWER IMPLEMENT** if possible, when adjusting maintenance work; otherwise **BLOCKS IT SECURELY** at a workable height.
3. When Implement and tractor are parked always lower disk to the ground and place a **FLAG OR OTHER WAARMING DEVICE** on each corner as someone could run or bump into the implement.
4. Implement should be **DETACHED ONLY** in an area where Children **DO NOT PLAY**.
5. **DO NOT** wear loose fitting clothing that could catch on various parts.
6. Machinery should be **OPERATED ONLY** by those who are **RESPONSIBLE AND DEEGATED** to do so.
7. **ONLY ONE PERSON** – the operator – should be permitted on the tractor when implement is in operation, he should be thoroughly familiar with tractor and implement.
8. **MAKE CERTAIN** that everyone is in clear before starting tractor and implement combination.
9. **BEFORE WORKING** under the any hydraulically controlled unit IS SURE it is **SECURELY BLOCKED**.
10. The **RATE OF SPEED** on hillsides or curves should be regulated so there is no danger of tipping.
11. **DO Not** drive too close to the edge of a ditch or creek.
12. **REDUCE SPEED** when transporting unit to avoid bouncing and momentary loss of steer ability.
13. **MAKE CERTAIN** tractor is equipped with sufficient front end weight to counter-balance the plow weight and maintain stability of front of tractor.
14. **DO NOT** attempt to operate tractor and implement unless you are in the diver seat.
15. **ALWAYS** place transmission in **PARK or NEUTRAL, LOCK BRAKES, STOP ENGINE AND REMOVE START KEY** before dismounting from the tractor.
16. **NEVER** stand between tractor and disc when hitching.
17. **PROVIDE** a first aid kit. Treat all scratches, cuts, etc. with proper antiseptic immediately.
18. If **DECALS** become damaged or come off, they should be replaced immediately.
19. **REMEMBER** that safe operation is no accident.

ON HIGHWAY OPERATION

1. Use the **SLOW MOVING** vehicle emblem in daytime and approved warning lights at night, or during other periods of poor visibility, to prevent highway accidents.
2. **COMPLY** with Local highway regulation concerning moving machinery on highways.
3. **MAINTAIN** complete Control of machines at all times when traveling on the highway.
4. Due to the width of the implement, **US EXTRA CAUTION** on highways, far lanes and when approaching gates.

WARRANTY

DOMRIES Enterprises warrants its products, to be free of defects in workmanship and material for a period of one (1) year from date of delivery to initial user when given reasonable use under normal conditions. This Warranty is limited to the repair or replacement, as the Manufacturer shall elect upon inspection to have been defective in material or workmanship, but does not include any installation or transportation costs.

This Warranty shall not apply to any DOMRIES equipment or part thereof which has been damaged in any accident, by fire, flood, or act of God. This Warranty is likewise not extended to repairs or second hand machines, nor to DOMRIES products on which repairs or alterations have been made, unless authorized in writing by the Manufacturer.

No Warranty is made with respect to items made by others since such items are warranted by their respective makers, or on units supplied by the Manufacturer on special order.

The Manufacturer reserves the right at any time to make changes in design, materials or specifications of its products, without thereby becoming liable to make similar changes in units manufactured earlier.

This Warranty is in lieu of all other warranties covering DOMRIES products and no other warranties expressed or implied are made or authorized by the Manufacturer.

ANY PARTS USED OTHER THAN GENUINE DOMRIES' PARTS WILL NULLIFY ALL WARRANTIES.

DOMRIES ENTERPRISES

12281 Road 29

Madera, California 93638


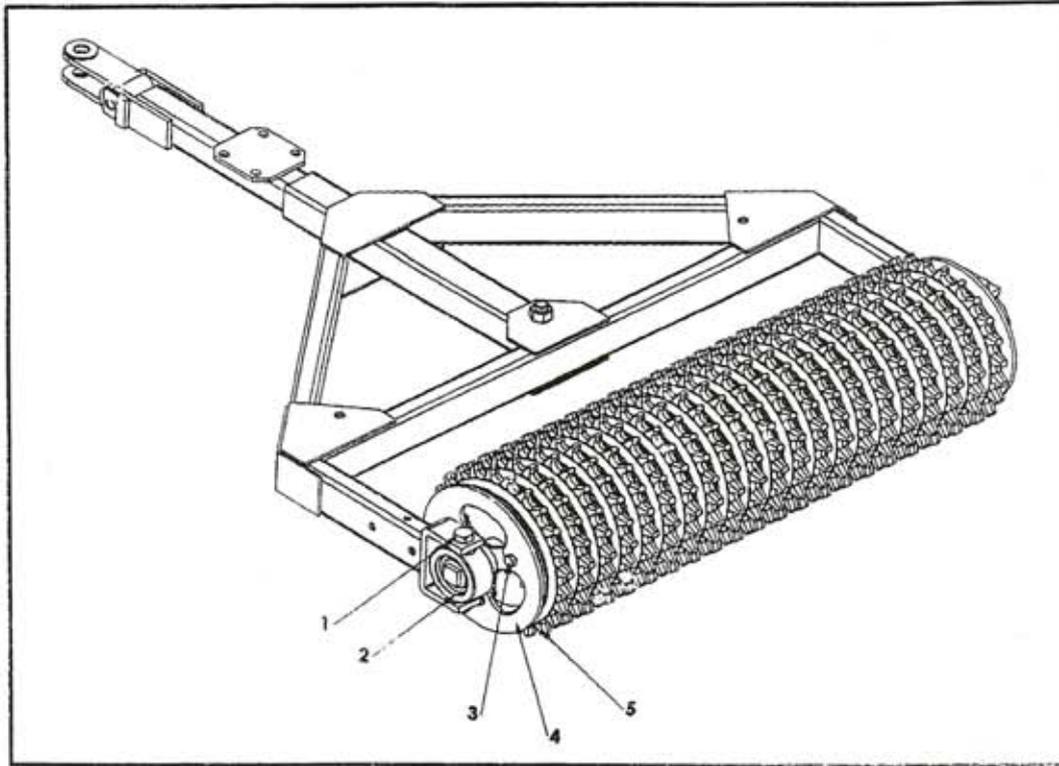


FIG. 1

REPLACING BROKEN RINGS (FIG. 1)

Loosen bolts (1) and slide off the bearing assembly (2). Loosen nut (3) and take out retaining ring (4). Replace broken rings. Make sure all rings point in the same direction.

MODEL - CC

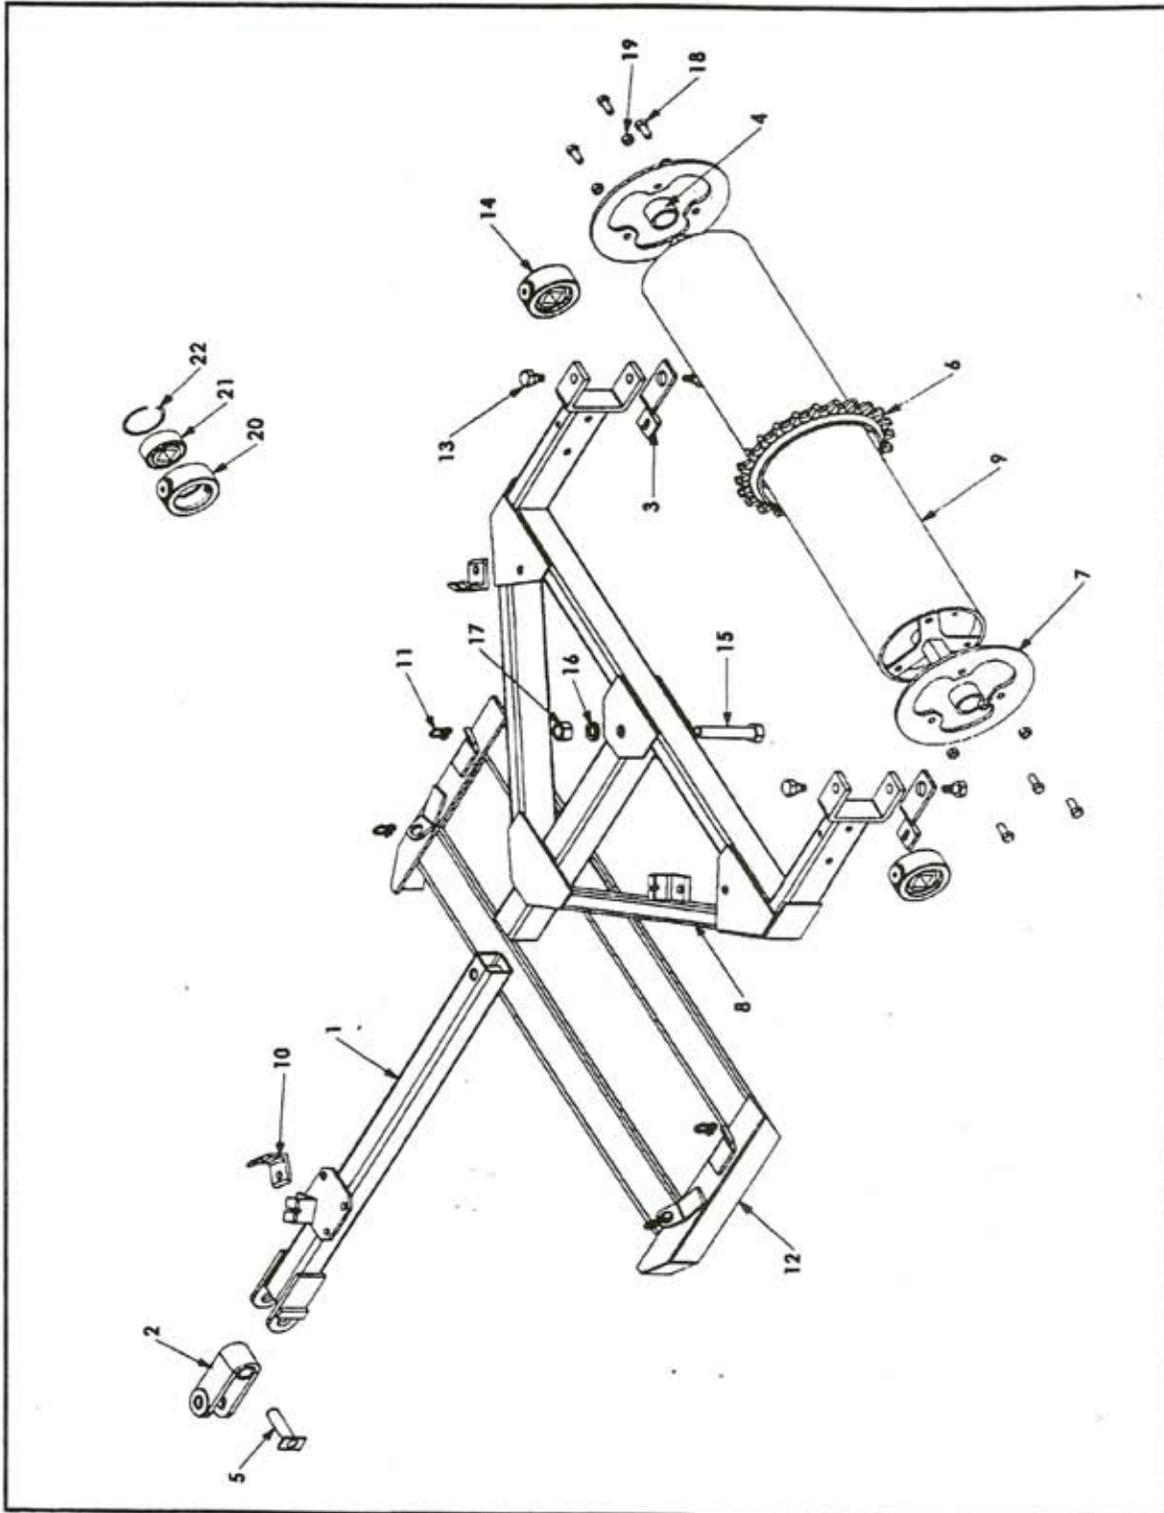


CC- MAIN FRAME

MODEL - CC

Ref #	Part #	Clod Crusher Assembly	Wt./lb	List Price
1.	CC-25	Draw Bar	38	
2.	CC-26	Tongue-Clevis	13	
3.	CC-27	Wear Plate	41	
4.	CC-28	Spacer	2	
5.	OL-133	Pin Tongue	3.1	
6.	CC-30	Ring, Cast 12-16	20	
7.	CC-101-10	Ring, Retailing	8.6	
8.	CC-500	Main frame, 5'0"	145	
9.	CC-500-T	Roller, 5'0"	235	
10.	CVL-10	Bracket, Angle	1.8	
11.	CVL-11	Screw Pin Shackel	0.5	
12.	CVL-500	"V" Leveler	140	
13.	RPO-93	Shoulder Bolt	0.4	
14.	RPO-466D-Kit	Brg. Assy, 1-1/2sq, THD Type	10.6	
15.	CS1186-5	Bolt, 1-1/8" x 6"	1.5	
16.	LW118	Lockwasher-Spring, 1-1/8nom	0.1	
17.	N118	Nut, 1-1/8nc, Hex	0.3	
18.	CS58112-5	Bolt, 5/8nc x 1-1/2lg	0.3	
19.	N58	Nut, 5/8nc, Hex	0.1	
RPO-466D-KIT				
20.	RPO-80	Brg House, 1-1/2sq, THD Type	6.7	
21.	RPO-103D	Brg Gang, 1-1/2sq	3.8	
22.	RPO-99	Retaining Ring	0.1	

Ref #	Part #	Transport Kit	Wt./lb	List Price
1.	CCHT-01	Slide Plate		
2.	CCHT-02	Transport Lock		
3.	CCHT-04	Bottom Plate		
4.	CCHT-506	Main Frame		
5.	CCHT-03	Hydraulic Cylinder, 2-1/2" x 16 Stk		
6.	BLD65	Pin, Pivot & Pull, 7/8" x 5-1/8"		
7.	BLD33	Klick Pin, 7/16 dia		

MODEL - CC

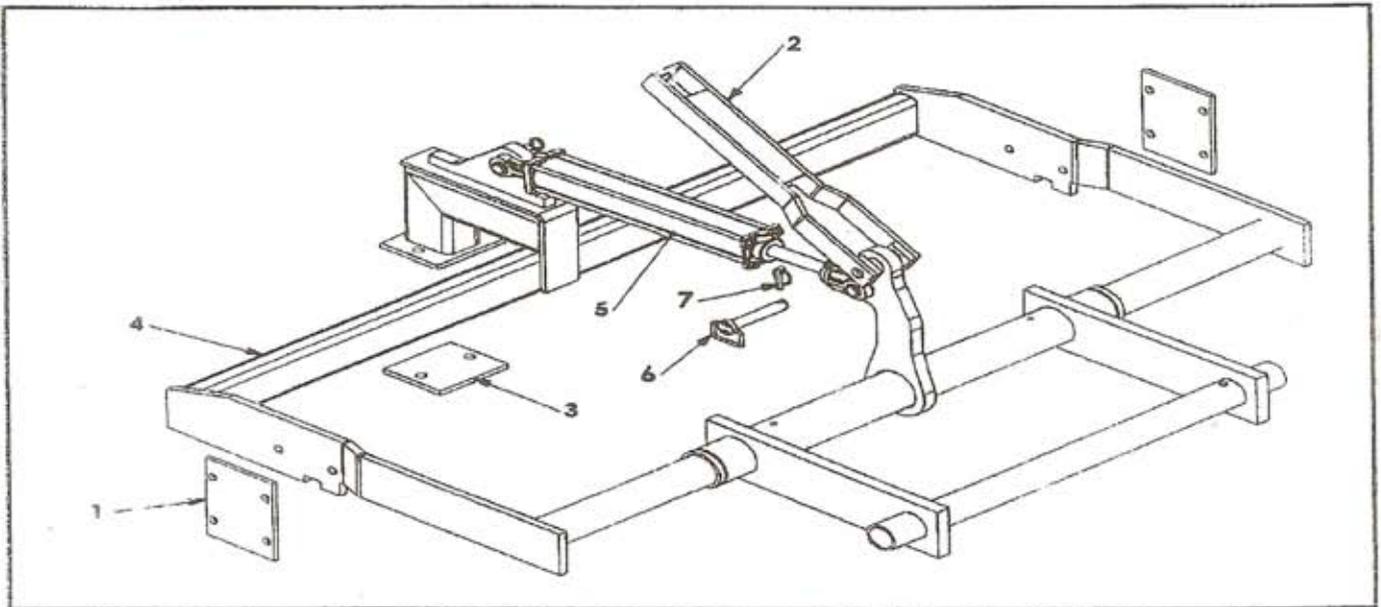

Ref #	Part #	Spindle Assembly	Wt./lb	List Price
1.	DSH-302	Hub	10	
2.	DSH-303	Bearing Cup, Outer	0.1	
3.	DSH-304	Bearing Cone, Outer	0.3	
4.	DSH-305	Bearing Cup, Inner	0.2	
5.	DSH-306	Bearing Cone-Inner	0.4	
6.	DSH-307	Inner Seal	0.1	
7.	DSH-308	Outer Seal	0.1	
8.	DSH-309	Tubing Sleeve	0.3	
9.	DSH-310	Clamp Assy	0.31	
10.	DSH-312-S	Slip in Spindle	9	
11.	DSH-313	Slotted Nut	0.1	
12.	DSH-314	Spindle Washer	0.01	
13.	DSH-316	Dust Cap	0.2	
14.	DSH-318	Lug Bolt-(1/2"nf x 1"long)	0.1	
15.	SN-W-09	Wheel 12x5, 6(1/2) on 5-1/2 BCD	12.5	
16.	SN-W08-4	Tire, 23x8.5-12"	15	

MODEL- CC

